


User manual
Manuel d'utilisation
Manual del usuario
Manual do usuário




PHILIPS

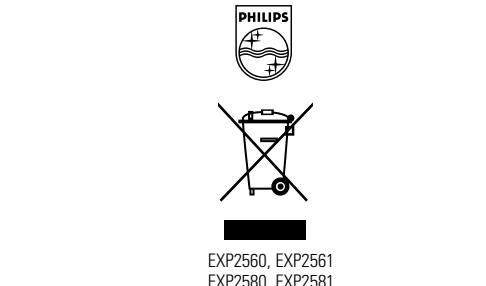

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.
2005 © Koninklijke Philips Electronics N.V. All rights reserved.
<http://www.philips.com>

Printed in China

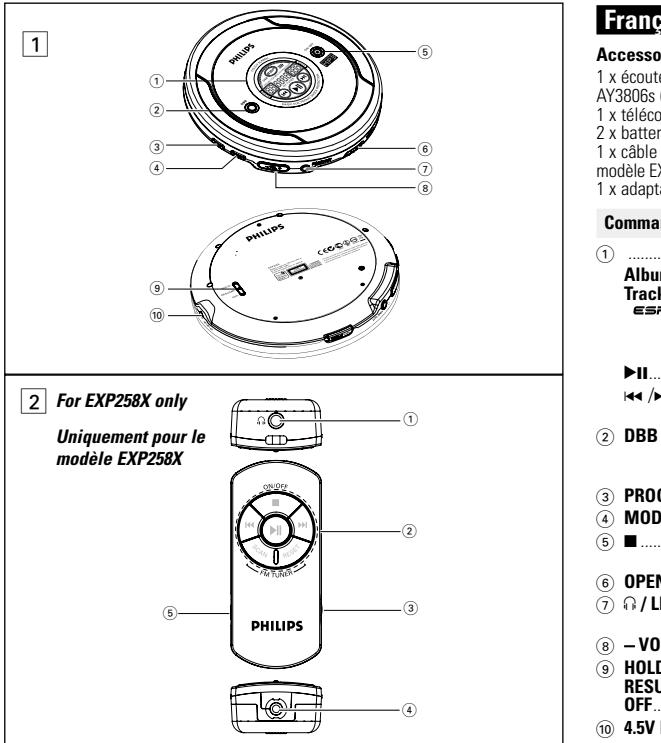

English

CONTROLS

- Supplied Accessories:**
 - 1 x headphones AY3806 (EXP256X series) and AY3805 (EXP258X series)
 - 1 x remote control AY5502 (for EXP258X only)
 - 2 x remote control batteries (for EXP258X only)
 - 1 x remote control connection cable AY4115 (for EXP258X only)
 - 1 x AC/DC adapter AY3162 (for EXP2561 and EXP2581 only)
- CONTROLS (see figure [1])**
 - ① OPEN ... opens the CD lid.
 - ② VOL + - ... adjust the volume.
 - ③ HOLD ... locks all buttons.
 - ④ RESUME ... stores the last position of a CD tracked played.
 - ⑤ OFF ... switches HOLD off.
 - ⑥ 4.5V DC ... jack for external power supply.

PLAYING A CD

To stop playback

- Press ■. Audio CD: The display shows the total number of tracks and total playing time.
- MP3/WMA CD: The total numbers of tracks and albums are displayed respectively.
- Press ■ again to turn off the player.
- To remove the CD, hold it by its edge and press the hub gently while lifting the CD.

Helpful Hints:

- If there is no more activity, the set will automatically switch off after 25 seconds.

VOLUME AND SOUND

Volume adjustment

- Adjust the volume by using VOL + (0-30).

Bass adjustment

- Press DBB to switch the bass enhancement on or off.
- DBB appears if the bass enhancement is activated.

CLASS 1 LASER PRODUCT

Be responsible Respect copyrights

Specifications are subject to change without notice.

Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

2005 © Koninklijke Philips Electronics N.V. All rights reserved.

<http://www.philips.com>

Printed in China

EXPAINI

PHILIPS

EXPAINI

EXPAINI